



24HP

Petrol Engine

E24.02VEP/LC2P77F

OWNERS MANUAL

Cox Industries (Aust) Pty Ltd

www.coxmowers.com.au

TABLE OF CONTENTS

1. General information	1
2. Safety regulations	1
3. Components and controls	2
4. What you need to know	3
5. Standards of use	4
6. Maintenance	6
7. Troubleshooting	8
8. Technical data	8

1. GENERAL INFORMATION

1.1 READING AND UNDERSTANDING THE MANUAL

Some paragraphs in the manual containing information of particular importance for safety and operation are highlighted at various levels of emphasis, and signify the following:

NOTE

or

IMPORTANT

These give details or further information on what has already been said, and aim to prevent damage either to the engine or other damages.

⚠ WARNING!


Non-observance will result in the risk of injury to oneself or others.

⚠ DANGER!

Non-observance will result in the risk of serious injury or death to oneself or others.

NOTE

All indications, "front", "rear", "right" and "left", are to be taken as referring to the engine positioned with the spark plug facing forwards with respect to the observer.

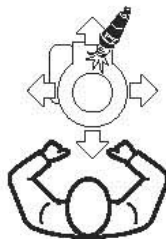

2. GENERAL SAFETY STANDARDS

(to be strictly applied)

A) TRAINING


- 1) Carefully read the instructions contained in this manual and the instructions of the machine on which this engine is installed. Learn how to stop the engine quickly.
- 2) Never allow people unfamiliar with these instructions to use the engine.
- 3) Never use the engine while people, especially children, or pets are nearby.
- 4) Remember that the operator or user is

The number before the paragraph title refers to the text references and their related figures (shown inside front and back covers).

1.2 SAFETY SYMBOLS

Your engine should be used with due care and attention. Symbols have therefore been placed on the engine to remind you of the main precautions to be taken. Their full meaning is explained later on.

You are also asked to carefully read the safety regulations in the applicable chapter of this handbook.

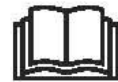

Warning! - Read and follow Operating Instructions before running engine.



Warning! - Gasoline is flammable. Allow engine to cool at least 2 minutes before refuelling.



Warning! - Engines emit carbon monoxide. DO NOT run in enclosed area.

responsible for accidents or hazards occurring to other people or their property.

B) PREPARATION

- 1) Do not wear loose-fitting clothing, dangling drawstrings, jewels or items that could become caught; tie up long hair and keep at safe distance while starting the lawnmower.
- 2) Turn engine OFF and let it cool before removing gas cap.
- 3) **WARNING: DANGER!** Fuel is highly flammable:
 - store the fuel in special containers;
 - refuel only outdoors by using a funnel; never smoke while refueling and/or handling fuel;

- *add fuel before starting the engine. Never remove the cap of the fuel tank or add fuel while the engine is running or when the engine is hot;*
 - *if you have split some fuel, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until the fuel has evaporated and fuel vapours have dissipated.*
 - *always put the tank and fuel container caps back on and tighten well.*
- 4) Replace faulty silencers and the guard, if damaged.**

C) OPERATION

- 1) Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.**
- 2) Do not use starting fluids or similar products.**
- 3) Do not change the engine governor settings or overspeed the engine.**
- 4) Do not tilt the machine onto its side to prevent fuel leaks from the fuel tank cap.**
- 5) Do not touch the cylinder fins and/or the silencer guard until the engine has cooled down.**
- 6) Stop the engine and disconnect the spark plug cable before checking, cleaning or servicing the machine or the engine.**
- 7) Do not crank the engine with spark plug removed.**
- 8) Transport the machine with empty tank.**

D) MAINTENANCE AND STORAGE

- 1) A routine maintenance is essential for safety and for keeping a high performance level.**
- 2) Do not store the machine with fuel in the tank in an area where the fuel vapours could reach an open flame, a spark or a strong heat source.**
- 3) Allow the engine to cool before storing in any enclosure.**
- 4) To reduce the fire hazard, keep the engine, the silencer and the fuel storage area free of grass, leaves, or excessive grease.**
- 5) If the fuel tank has to be drained, this should be done outdoors once the engine has cooled down.**
- 6) On safety ground, never use the engine with either worn or damaged parts. Parts are to be replaced and not repaired. Use genuine spare parts. Parts that are not of the same quality can damage the engine and impair your safety.**

3. COMPONENTS AND CONTROLS

3.1 ENGINE COMPONENTS

1. Oil filler cap with dipstick
2. Oil drain plug
3. Air cleaner cover
4. Fuel stopcock
5. Spark plug cap
6. Engine code



--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Note your engine serial number here

3.2 ACCELERATOR CONTROL

The throttle trigger (generally a lever), fitted to the machine, is connected to the engine by a cable.

Consult the machine's Instructions Manual to identify the throttle trigger and its positions, usually marked by symbols, corresponding to:



CHOKE = to be used for starting from cold.



FAST = corresponds to maximum revs; to be used when working.



SLOW = corresponds to minimum revs.

4. WHAT YOU NEED TO KNOW

The engine performance, reliability and life are influenced by many factors, some external and some strictly associated with the quality of the products used and with the scheduled maintenance.

The following information allow a better understanding and use of your engine.

4.1 ENVIRONMENTAL CONDITIONS

The operation of a four-stroke endothermic engine is affected by:

a) Temperature:

- Working in low temperatures could lead to a difficult cold starting.
- Working in very high temperatures could lead to a difficult hot starting due to the evaporation of the fuel either in the carburetor float chamber or in the pump.
- In any case, the right kind of oil must be used, according to the operating temperatures.

b) Altitude:

- The higher the altitude (above sea level), the lower the max power developed by an endothermic engine.
- When there is a considerable increase in altitude, the load on the machine should be reduced and particularly heavy work avoided.

4.2 FUEL

A good quality fuel is the major issue for the engine reliability of operation.

- a) Use unleaded gasoline, with a minimum of 90 octane.
- b) Use clean, fresh fuel; purchase fuel in quantity that can be used within 30 days, to prevent gum from forming inside the container or the tank.
- c) Do not use fuel which contains Methanol.
- d) Do not add neither oil nor any kind of fuel additive.

4.3 OIL

Use always high quality oils, choosing their viscosity grade according to the operating temperature.

- a) Use only detergent oil classified SF-SG.
- b) Choose the SAE viscosity grade of oil from this chart:

- from 5 to 35 °C = SAE 30
- from -15 to + 5 °C = 5W-30 or 10W-30 (Multi-viscosity)
- from -25 to + 35 °C = Synthetic oils 5W-30 or 10W-30 (Multi-viscosity)

- c) The use of multi-viscosity oils in hot temperatures will result in higher than normal oil consumption; therefore, check oil level more frequently.
- d) Do not mix oils of different brands and features.
- e) SAE 30 oil, if used below 5°C, could result in possible engine damage due to inadequate lubrication.
- f) Oil should be at "MAX" mark do not overfill. Overfilling with oil may cause:
 - Smoking;
 - Spark plug or air filter fouling, which will cause hard starting.

4.4 AIR FILTER

The air filter must always be in perfect working order, to prevent debris and dust from getting sucked into the engine, reducing the efficiency and life of the machine.

- a) Always keep the filtering element free of debris and in perfect working order.
- b) If necessary, replace the filtering element with an original spare part. Incompatible filtering elements can impair the efficiency and life of the engine.
- c) Never start the engine without mounting the filtering element properly.

4.5 SPARK PLUG

Not all the spark plugs for endothermic engines are the same!

- a) Use only spark plugs of the recommended type, with the right heat range.
- b) Check the length of the thread, because – if too long – it will damage the engine beyond repair.
- c) Make sure that the electrodes are clean and their gap is correct.

5. STANDARDS OF USE

5.1 BEFORE EVERY USE

Before every use, perform the following checking procedures in order to assure a regular operation.

5.1.1 Check oil level

See the specific chapter (8.1) for the oil to be used.

- a) Place engine level.
- b) Clean around oil fill.
- c) Unscrew the cap, clean the end of the dipstick and insert it, as illustrated, without screwing it down.
- d) Remove the cap with the dipstick and check the oil level that must be between the "MIN" and "MAX" marks.
- e) If oil is required, add oil of the same kind up to the "MAX" mark, being careful not to spill any outside the oil fill.
- f) Fully tighten the filler cap and wipe off any spilled oil.

5.1.2 Check air cleaner

The efficiency of the air filter is fundamental for the engine to work properly. Do not start the engine if the filtering element is missing or broken.

- a) Clean around the filter cover.
- b) Remove the cover by unscrewing the two knobs.
- c) Check the condition of the filtering element. It must be intact, clean and in perfect working order; if not, either carry out maintenance or replace it.
- d) Put the cover back.

5.1.3 Adding fuel

IMPORTANT

Do not drip petrol onto the plastic parts of the motor or the machine to prevent damaging them and remove all traces of spilt petrol immediately. The warranty does not cover damage to plastic parts caused by petrol.

See "Technical Data" chapter (8.1) for the fuel characteristics.

Refuelling must be made when the engine is cold, following the instructions contained in the machine's Instructions Manual.

5.1.4 Spark plug cap

Firmly connect the cable cap to the spark plug, making sure that there are no traces of dirt inside the cap and on the spark plug terminal.

5.2 STARTING THE ENGINE (cold)

The engine must be started in the way described in the machine's Instruction Manual, always making sure that any device (if present) that could cause the machine to advance or the engine to stop is disengaged.

- a) Open the fuel stopcock.
- b) Move the throttle to "CHOKE".
- c) Turn the starter key as described in the machine's instruction manual.

After a few seconds, slowly move the throttle from "CHOKE" to either "FAST" or "SLOW".

NOTE

If the engine starts but does not keep running, repeat the above steps with the throttle on "FAST".

5.3 STARTING THE ENGINE (hot starting)

- Follow the whole cold-starting procedure with throttle control in "FAST" position.

5.4 USE OF THE ENGINE IN OPERATION

Maximum revs must be used to optimise the engine's yield and performance, by setting the throttle trigger to "FAST".

▲ WARNING!

Keep your hands away from the silencer and surrounding areas that can become extremely hot. With the engine running, do not get loose-fitting clothing (ties, scarves, etc.) or hair closer to the top part of the engine.

IMPORTANT *Do not operate on over 20° inclines to prevent malfunctioning of the engine.*

5.5 STOPPING THE ENGINE DURING MOWING

- a) Move the throttle to "SLOW".
- b) Allow the engine to run at minimum speed for at least 15-20 seconds.
- c) Stop the engine following the instructions contained in the machine's Instructions Manual.

5.6 STOPPING THE ENGINE AFTER MOWING

- a) Move the throttle to "SLOW".
- b) Allow the engine to run at minimum speed for at least 15-20 seconds.
- c) Stop the engine following the instructions contained in the machine's Instructions Manual.
- d) When the engine is cold, disconnect the spark plug and remove the starter key (if present).
- e) Close the fuel stopcock.
- f) Remove any debris from the engine and especially around the exhaust silencer to reduce the risk of fire.

5.7 CLEANING AND STORAGE

- a) Do not spray with water or use hydraulic lances to clean the exterior of the engine.
- b) Use a compressed air gun (max. 6 bars) for preference, thus preventing debris and dust from penetrating inside.
- c) Store the lawnmower (and the engine) in a dry place, sheltered from severe weather conditions and sufficiently ventilated.

5.8 LONG STORAGE (over 30 days)

In case the engine has to be stored for a long time (for example at the end of the season), a few precautions are needed to help the future start-up.

- a) To prevent the formation of deposits inside the tank, empty it of fuel by unscrewing the carburettor float chamber plug and collect-

ing all the fuel in a suitable container. At the end of the operation remember to screw the plug back on and fully tighten it.

- b) Remove the spark plug and pour about 3 cl of clean engine oil into the spark plug hole, then, having blocked the hole with a rag, run the starter motor briefly to turn the engine for a few revs and distribute the oil over the inner surface of the cylinder. Finally replace the spark plug without connecting the cable cap.

6. MAINTENANCE

6.1 SAFETY RECOMMENDATIONS

▲ WARNING! Remove the spark plug cap and read instructions before carrying out any cleaning, repair or maintenance operation. Wear proper clothing and working gloves whenever your hands are at risk. Do not perform maintenance or repair operations without the necessary tools and technical knowledge.

IMPORTANT Never get rid of used oil, fuel or other pollutants in unauthorised places.

6.2 MAINTENANCE SCHEDULE

Follow the hourly or calendar – whichever occur first – maintenance schedule shown in the following table.

Operation	After First 5 hours	Every 5 hours or daily	Every 50 hours or every season	Every 100 hours
Check oil level	-	✓	-	-
Change oil ¹⁾	✓	-	-	✓
Clean silencer and engine	-	✓	-	-
Air filter cleaning ²⁾ and check	-	✓	-	-
Air filter replacement ²⁾	-	-	✓	-
Check spark plug	-	-	✓	-
Replace spark plug	-	-	-	✓
Fuel filter check ³⁾	-	-	-	✓

¹⁾ Change oil every 25 hours if the engine is operating under heavy load or in hot weather.

²⁾ Clean air cleaner more frequently if the machine is operating in dusty areas.

³⁾ To be carried out by a specialized Centre.

6.3 CHANGE OIL

See the specific chapter (8.1) for the oil to be used.

▲ WARNING! Drain oil while the engine is warm, being careful not to touch the hot engine nor the drained oil.

- Place the machine on a flat surface.
- Clean the area around the filler cap and unscrew the cap with dipstick.
- Provide a suitable container for collecting the oil and unscrew the drain plug.
- Refit the drain plug and fully tighten it having made sure that the gasket is in the right position.
- Fill up with fresh oil.
- Check that the oil level has reached the "MAX" notch on the dipstick.
- Close the cap again and clean up any traces of oil that was possibly spilt.

NOTE

The oil capacity is about 2.0 liter.

6.4 CLEAN SILENCER AND ENGINE

Silencer must be cleaned when the engine is cold.

- Use a jet of compressed air to remove any debris and dirt that could cause a fire from the silencer and its protective cover.
- Make sure that the cooling air intakes are not blocked.
- Clean the plastic components with a sponge soaked in water and detergent.

6.5 AIR FILTER MAINTENANCE

- Clean the area around the filter cover.
- Remove the cover by unscrewing the two knobs.
- Remove the filtering element.
- Tap the cartridge on a solid surface and blow it from the inside with compressed air to remove dust and debris.

IMPORTANT

Do not use water, petrol, detergents or any other products to clean the cartridge.

IMPORTANT

The sponge pre-filter must NEVER be oiled.

- e) Clean the inside of the filter housing from dust and debris, making sure to block the inlet duct with a rag to prevent them from entering the engine.
- f) Remove the rag, install the filtering element in its housing and refit the cover.

6.6 SPARK PLUG SERVICE

- a) Remove the spark plug using a spark plug socket wrench.
- b) Clean the electrodes with a metal brush and remove any carbonaceous build-up.
- c) Using a thickness gauge, check for the right gap (0.6-0.8mm) between the electrodes.
- d) Install the spark plug and tighten with a socket wrench.

Replace the spark plug if the electrodes are burnt or if the porcelain is broken or damaged.

▲ WARNING!

Fire hazard! Do not check the ignition system with spark plug removed.

IMPORTANT

Use only spark plugs of the recommended type.

6.7 TUNING THE THROTTLE CABLE AND THE CARBURETTOR

Should the engine not reach maximum revs with the throttle trigger set to "FAST", it could be due to the throttle trigger and speed control lever being out of phase or to a carburetion problem.

Go to a specialised Centre or contact your Dealer to restore normal operation.

7. TROUBLESHOOTING


PROBLEM	LIKELY CAUSE	SOLUTION
a) Hard starting	- No fuel	- Check and top up
	- Stale fuel or build-ups in tank	- Empty fuel tank and refill with fresh fuel
	- Incorrect starting procedure	- Perform the starting procedure correctly
	- Spark plug disconnected	- Check that the spark plug cap fits well over the plug terminals
	- The spark plug is wet or the spark plug electrodes are dirty or placed inadequately	- Check
	- Air filter clogged	- Check and clean
	- Incorrect oil for the season	- Replace with proper oil
	- Fuel evaporation in the carburetor (vapor lock) due to high temperatures	- Wait for a few minutes then start again
	- Fault in carburation	- Contact a Licensed Service Centre
- Hard starting	- Contact a Licensed Service Centre	
b) Inconsistent working	- Dirty electrodes or incorrect gap	- Check
	- The spark plug cap is inserted incorrectly	- Check that the cap is fitted correctly
	- Air filter clogged	- Check and clean
	- Throttle trigger in "CHOKE" position	- Move the lever to the "FAST" position
	- Fault in carburation	- Contact a Licensed Service Centre
	- Fault in ignition	- Contact a Licensed Service Centre
c) Loss of power whilst operating	- Air filter clogged	- Check and clean
	- Fault in carburation	- Contact a Licensed Service Centre
	- Governor out of phase with respect to the accelerator	- Adjust the cable

8. TECHNICAL SPECIFICATIONS

8.1 REFILLING AND OPERATION MATERIALS

Fuel	Unleaded gasoline, minimum 90 octane
Engine oil: from 5 to 35 °C	SAE 30
from -15 to +5 °C	5W-30 or 10W-30
from -25 to +35 °C	Synthetic 5W-30 or 10W-30
Oil capacity	2.0 liter
Spark plug	F7TRC (NHSP) or equivalent
Spark plug gap	0.6 - 0.8 mm

Engine wiring diagram

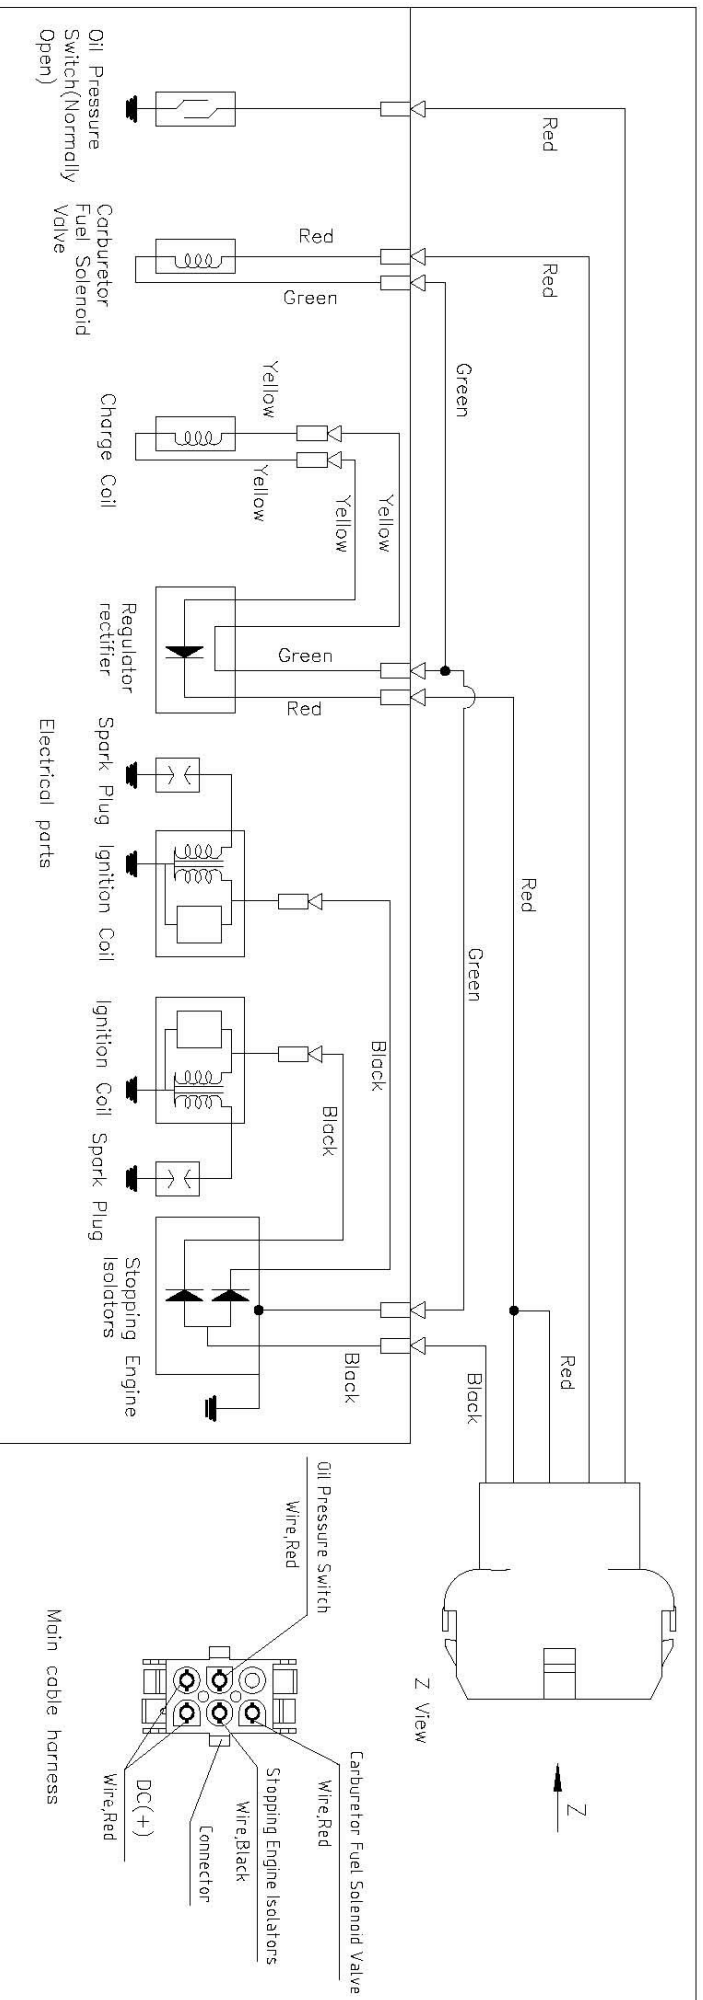

9. Warranty

Cox Industries (Australia) Pty Ltd!
70 Landseer Street
ACACIA RIDGE QLD 4110



Freecall: 1800 330 444
Phone: (07) 3323 2222

COX INDUSTRIES POWERBOSS ENGINE WARRANTY POLICY

LIMITED WARRANTY

Cox Industries (Australia) Pty Ltd warrants that, for the period of warranty specified below, it will repair or replace, free of charge any parts found to be defective in materials or workmanship under normal use and operating conditions. Other than for major failure it is at Cox Industries sole discretion as to whether the engine is repaired or replaced. This warranty is effective for and is subject to the conditions and time periods stated below. For warranty service the purchaser must contact an Authorised PowerBOSS Service Dealer and then make the product available to the Authorised PowerBOSS Service Dealer for inspection. Our engines come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Nothing in this warranty purports to modify or exclude the conditions, warranties and undertakings, and other legal rights, under the Australian Consumer Law. This warranty gives you additional protection for your engine and identifies a preferred approach to resolving warranty claims which will be the quickest and simplest for all parties, subject to the exclusions, terms and conditions below.

STANDARD WARRANTY TERMS		
ENGINE TYPE	DOMESTIC USE*	COMERCIAL USE**
PowerBOSS LC1P70FC-3 - 6HP	3 years	90 days
PowerBOSS LC1P92F-15HP	3 years or 300 hours, whichever comes first	1 year or 150 hours, whichever comes first
PowerBOSS LC1P91F-18HP	3 years or 300 hours, whichever comes first	1 year or 150 hours, whichever comes first
PowerBOSS LC2P77F-24hp	3 years or 300 hours, whichever comes first	1 year or 150 hours, whichever comes first

* "Domestic use" means for a personal, residential or household (property) purpose.

** "Commercial use" means all other uses other than domestic use, including any use that is income producing, rental, or is in relation to use in schools, by government departments or charity operators.

The warranty period begins on the date of purchase by the first retail (domestic) or commercial consumer.

Save your proof of purchase receipt. If proof of purchase cannot be provided when requesting a warranty repair, then the manufacturing date of the engine will be used to determine the warranty period.

WARRANTY EXCLUSIONS

This limited warranty covers defective materials or workmanship that are engine related only. Not repair, replacement or refund of the equipment it is fitted to. Similarly, warranty ceases to be applicable if the engine is modified or altered, or if the engine serial number has been removed or defaced. This warranty does not include second-hand, used, reconditioned or demonstration equipment. Nor does it cover performance or engine damage caused by the following:

1. The use of non-genuine PowerBOSS replacement parts.
2. The use of incorrect fuel and contaminated or stale fuel. Petrol formulated with ethanol content greater than 10%.
3. Operation of the engine with an incorrect grade, insufficient or contaminated engine lubricating oil.
4. Excessive vibration caused by loose engine mounting, over-speeding, incorrect coupling of equipment to the engine crankshaft PTO, or unbalanced cutter blades.
5. Improper maintenance of the air filtration system allowing dirt to enter the engine.
6. Parts and assemblies associated with the OEM manufacturer that are not genuine PowerBOSS components, such as; transmissions, clutches, equipment controls etc.

7. Striking an object with the cutting assembly of a lawnmower; damaged, worn or improperly installed blades and blade adaptors, impellers or other crankshaft coupled equipment, or excessive tightness of a v-belt.
8. Overheating of the engine due to excessive build-up of grass clippings, dirt and debris. Grass clippings, dirt, debris or other blockages to the aircooling system that would normally be cleared by routine maintenance.
9. Operating the engine without sufficient ventilation.
10. If the engine is not maintained as per the recommended maintenance schedule as outlined in this manual.
11. PowerBoss engines used to re-power equipment must be of an equivalent specification to the engine they are replacing. Failure to do so may lead to warranty claims being rejected.

ITEMS AND CONDITIONS NOT COVERED

1. Cost of regular maintenance and related charges for regular maintenance according to the PowerBOSS maintenance schedule such as parts including but not limited to; filters, lubricants and spark plugs.
2. Components failing due to normal wear.
3. Repairs attempted or carried out by anyone other than a PowerBOSS Authorised Dealer.
4. Any damage or defect caused by alteration, modification, fitment of a non-genuine part or attachment not approved by Cox Industries (Australia) Pty Ltd.
5. Any defect caused by misuse, negligence, accidents or failure to carry out proper maintenance procedures.
6. Damage caused by continued operation of the machine after it known to be defective.
7. Transportation, insurance or any other expenses incurred by the customer in making a warranty claim.
8. Costs of rental or related equipment while repairs are in progress.
9. Telephone, facsimile or other related communication expenses.
10. Damage caused by adverse external conditions such as thunderstorm activity, acts of God, acts of terrorism, damage caused by vermin or any other act or circumstance beyond Cox Industries (Australia) Pty Ltd control.
11. Damage caused by exposure to excessive heat, moisture or dampness, or exposure to abnormally corrosive conditions.

TO CLAIM THE WARRANTY

To make a claim under this warranty, please bring or send the Mower to an Authorised PowerBOSS Service Dealer with a copy of your proof of purchase*. A claim under this warranty is not formally made unless and until the proof of purchase is provided. This does not affect your statutory rights.

*If proof of purchase is not provided the manufacturing date of the engine will be used to determine the warranty period.

WARRANTY REGISTRATION

The online warranty registration form must be completed within 14 days of purchase. It is the purchasers' responsibility to ensure this is carried out.

This warranty is transferable to a subsequent owner of the engine, in the event of the sale of that product, provided that Cox Industries (Australia) Pty Ltd is informed in writing within a reasonable time of the sale of the subsequent owners name and contact details, such notice to be provided to Cox Industries (Australia) Pty Ltd. The notice should identify the name of the previous owner of the engine, place and date of purchase, model and serial number of the engine. The effective transfer of this warranty does not otherwise alter the terms of this warranty in any way.

For the avoidance of any doubt, any and all warranties or conditions which are not guaranteed under Australian Consumer Law or the Australian Competition and Consumer Regulations 2010 and which are not expressly included in this warranty as additional warranties or conditions are excluded.

To the extent applicable by law, Cox Industries (Australia) Pty Ltd will not accept liability for costs of labour, postage, cartage or delivery to replace faulty materials or parts, or for any loss, damage or accident directly, indirectly or consequently suffered by the purchaser, operator or any other person or property as a result of such faults whether due to defective materials or workmanship otherwise.



COX INDUSTRIES (AUST) PTY LTD

**70 Landseer Street
Acacia Ridge Qld 4110
Australia**

PH 07 3323 2222 FAX 07 3344 6233

Web Site Address: www.coxmowers.com.au

Email: sales@coxmowers.com.au